

Guidance on the use Three-frequency NEL-coils for metal detectors X-Terra Series

1. Connect the NEL search coil to metal detector;
2. Turn Metal detector (click on the On. / Off.)



- one click

3. To know which frequency coil operates at present time:

a) go to "frequency", for this once, click on press the "menu / choice";



- one click

b) press and hold the "accept / reject" on the panel;



- press and hold

Result on display:	Characteristics of search coil:
	Double-D coil «Low frequency» 3 kHz
	Double-D coil «Standart frequency» 7,5 kHz
	Double-D coil «High frequency» 18,75 kHz

4. Changing the operating frequency is by turning on and off metal detector with up to two seconds. When you turn off and switched at intervals of more than 2 seconds operating frequency does not change (save your last chosen frequency).

